

DRIVE AXLE BOOTS




Inspection guideline (Replace if necessary)

		Interval	
Severe driving condition	15,000 km	1 year	*whichever comes first
Normal driving condition	45,000 km	3 years	

Purpose and Function

The drive axle boots protect the joints of the drive shaft from foreign objects. The drive shaft is responsible for the transfer of power from the engine to the tires. The rubber covering joints of the drive shaft are the drive axle boots.

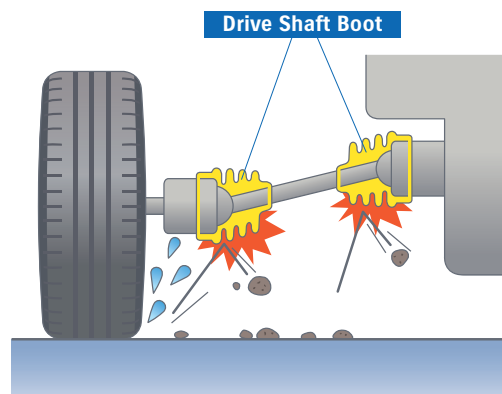

If overused without replacement ...

- You may not be able to drive the automobile if the joints are damaged. If cracks were to appear, replace the boots in order to prevent the joints damage.