

# MANUAL TRANSAXLE OIL (ATF)




**Inspection guideline (Replace if necessary)**

Interval		
30,000 km	2 years	*whichever comes first

## Purpose and Function

The oil lubrication inside the transaxle provides the smooth gear change and improves durability and reliability.

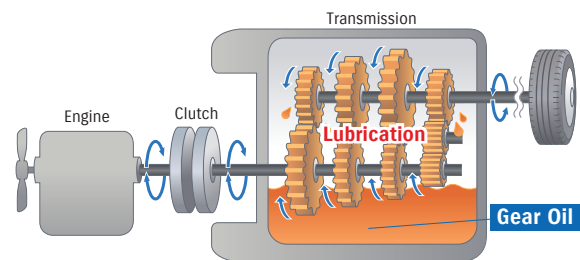

**If overused without replacement ...**

- As this oil deteriorates, gear lubrication becomes insufficient, and may cause gear and bearing damage.