



SWACE





Side mouldings





Installation Instructions

Part number: 99002-54Z00-006

Revision record

Rev. No.	Date	Page	Step	Remarks

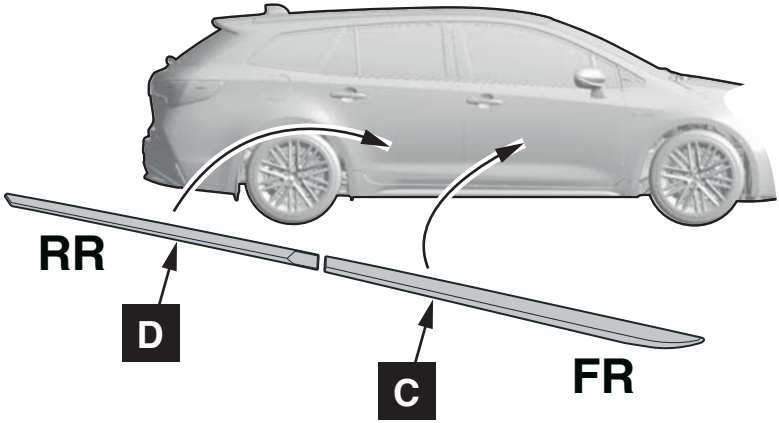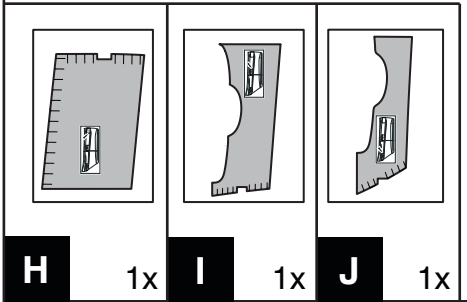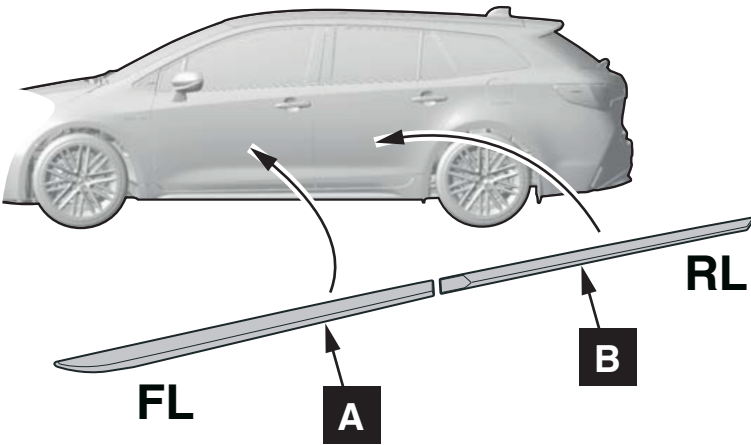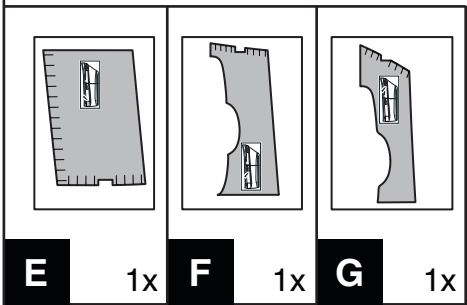


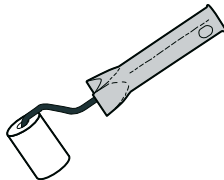
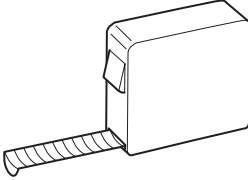
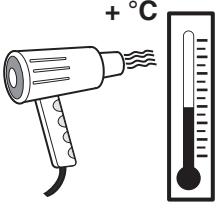
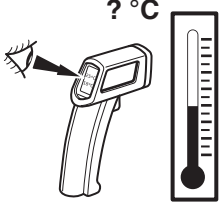
INFO




Material **S**afety **D**ata **S**heet




Technical **D**ata **S**heet

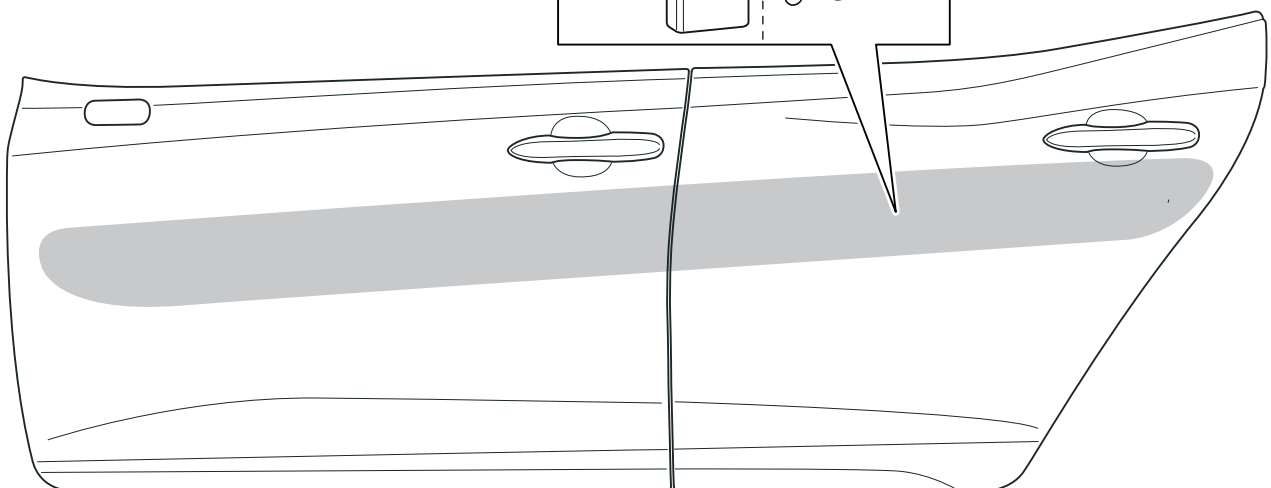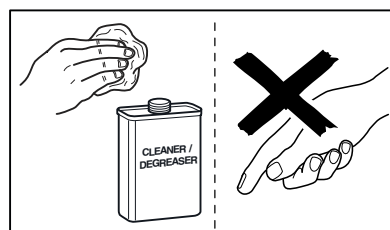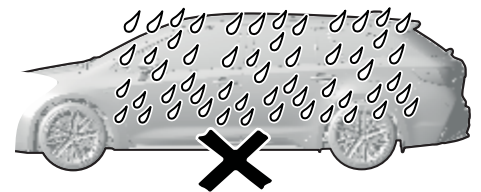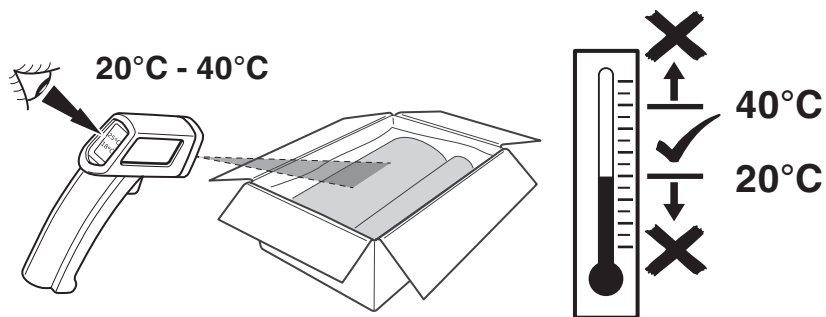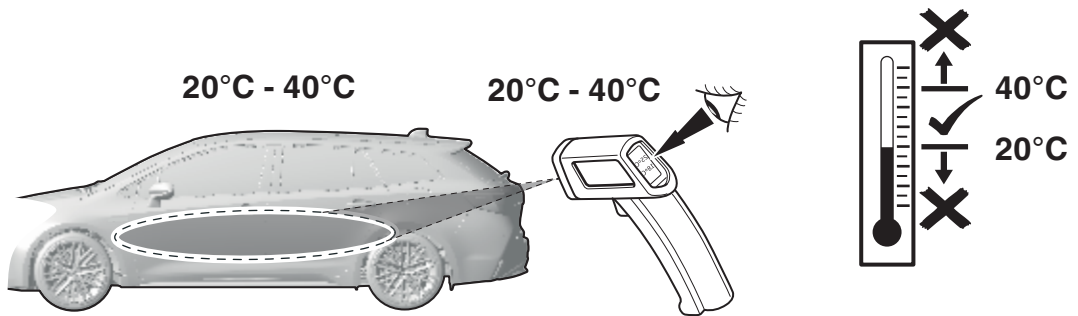

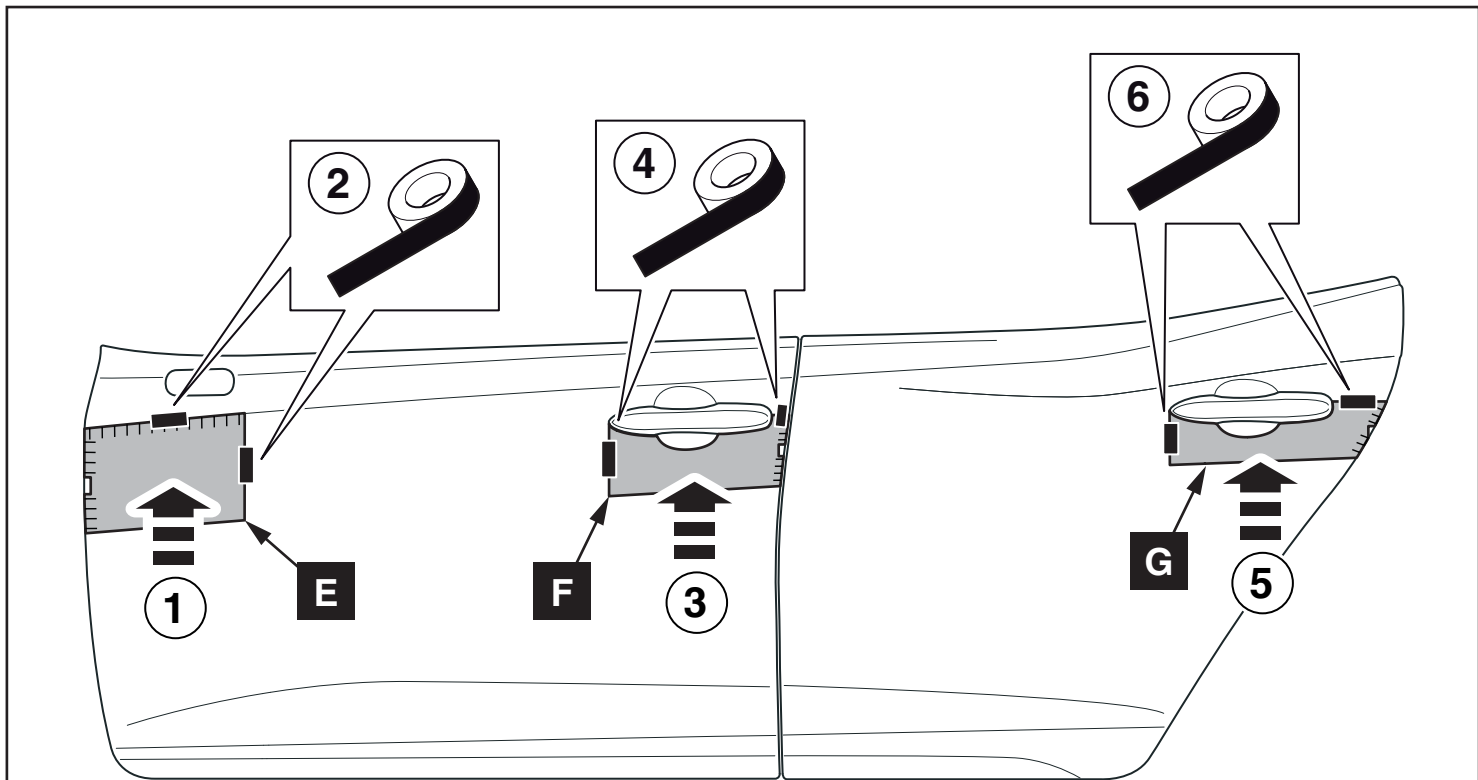


2

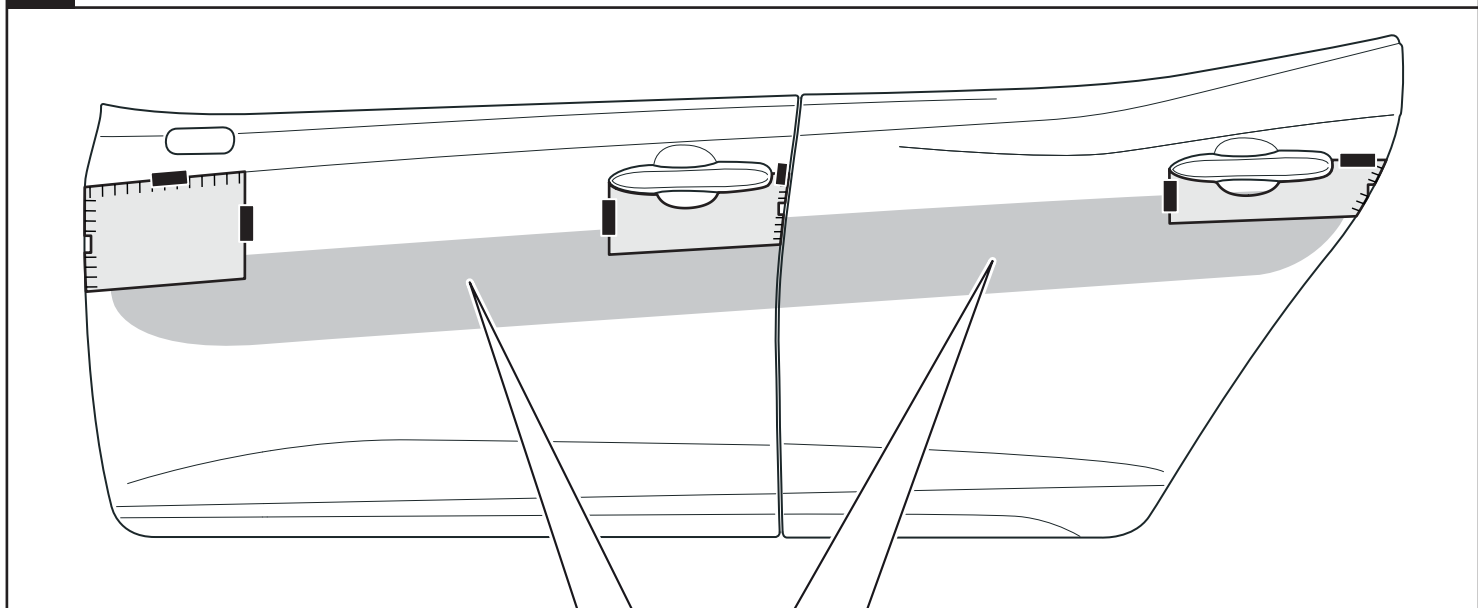


1 ? °C	< 20°C → 2 20°C - 40°C → 4	2 + °C
3 ? °C	20°C - 40°C → 4	INFO 3 → 12

3

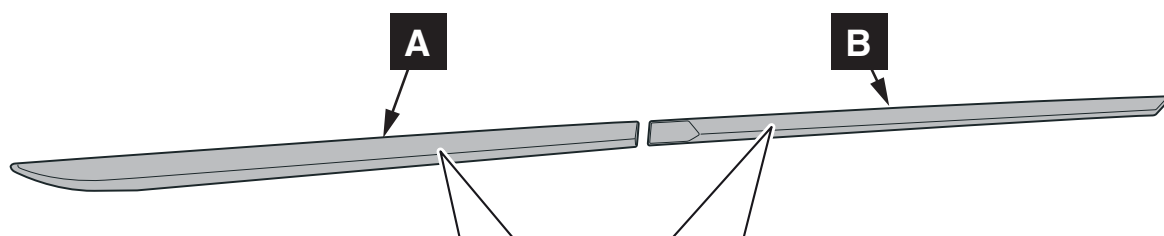

1	< 20°C → 2 20°C - 40°C → 5	2
3	20°C - 40°C → 5	INFO 4 → 6

4

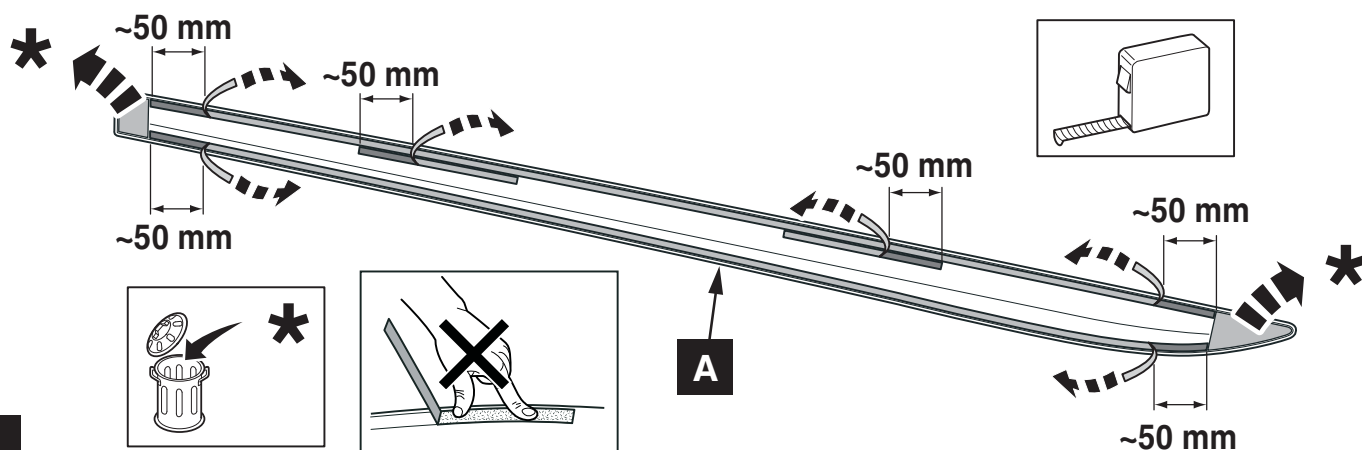


5




REAR VIEW




MADE IN TURKEY >PP+E/P< ECO-380!


UP

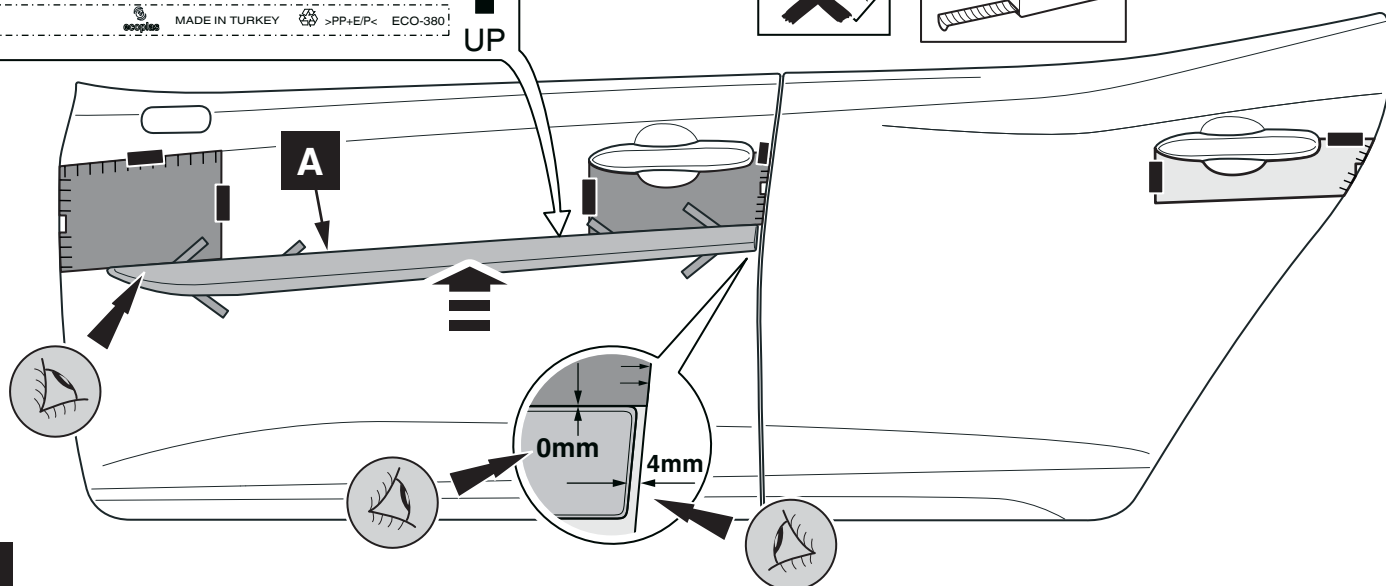


6

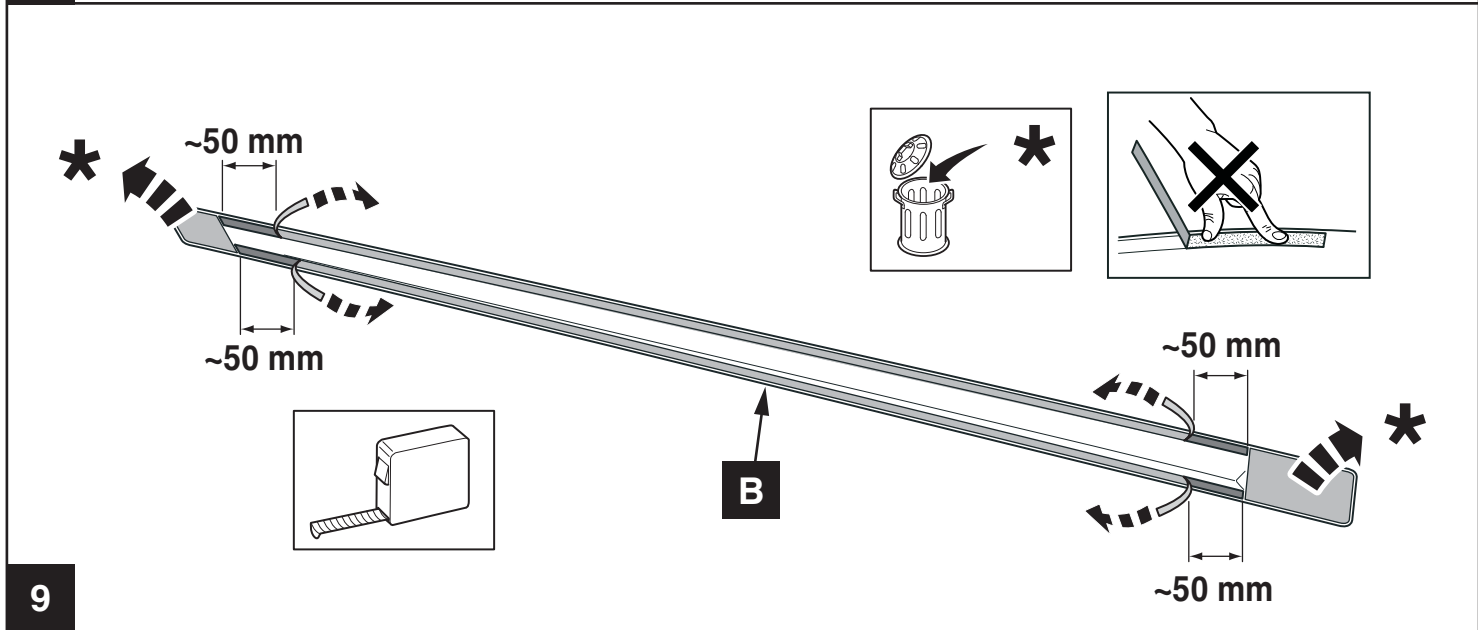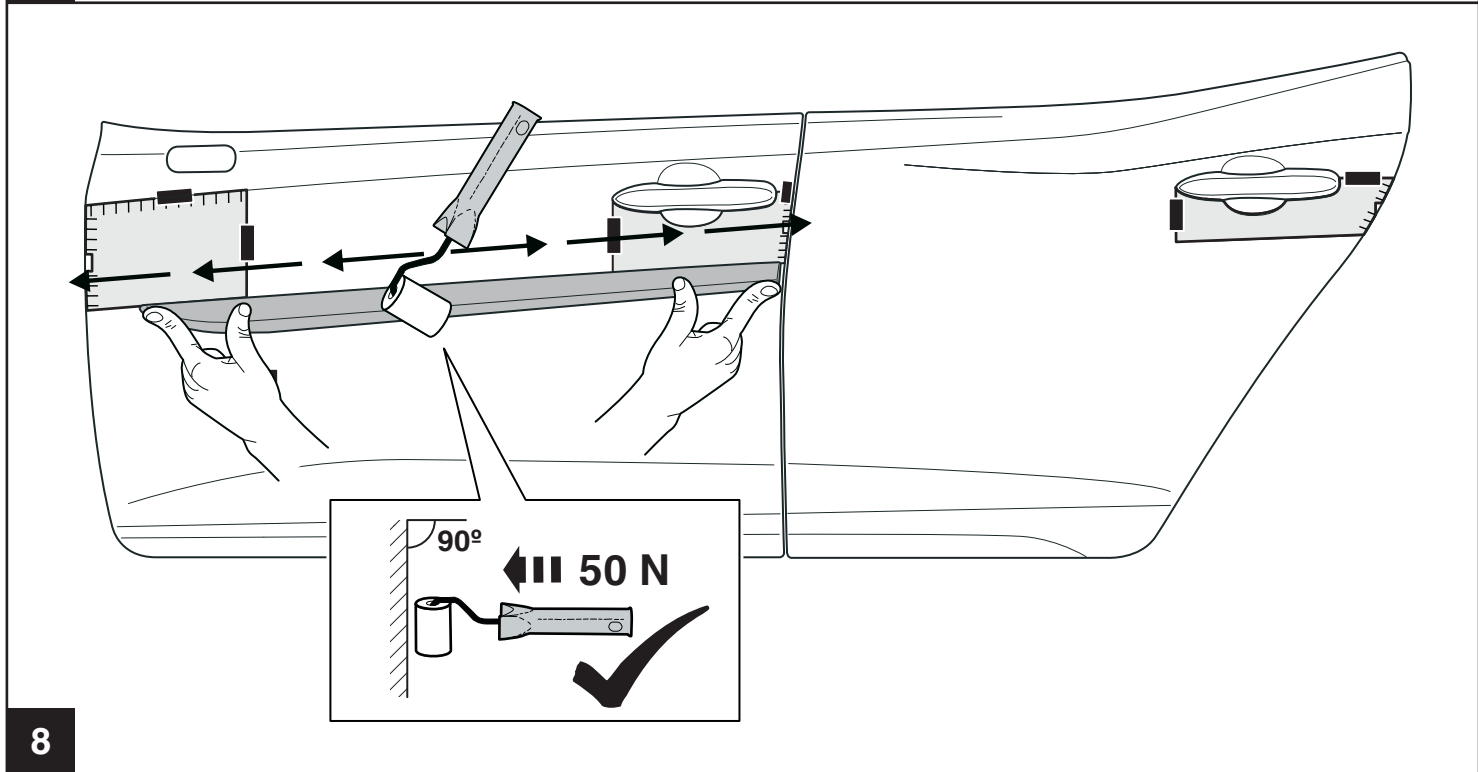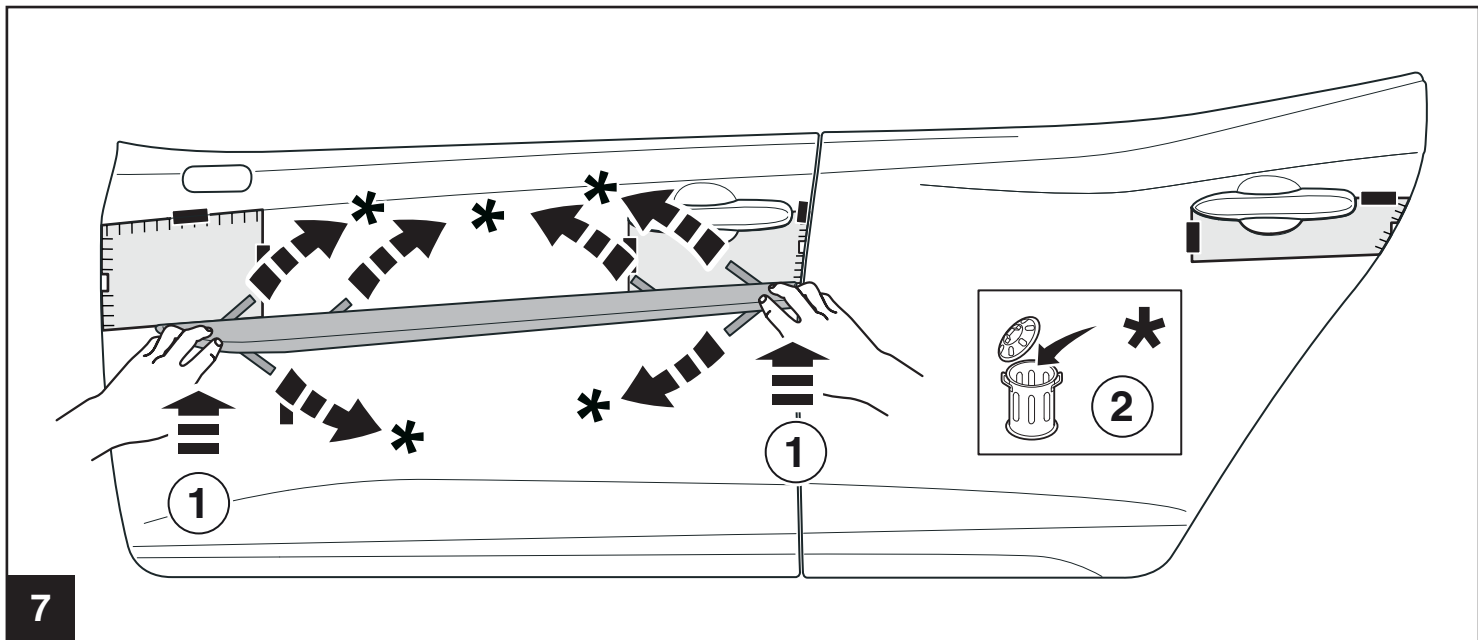

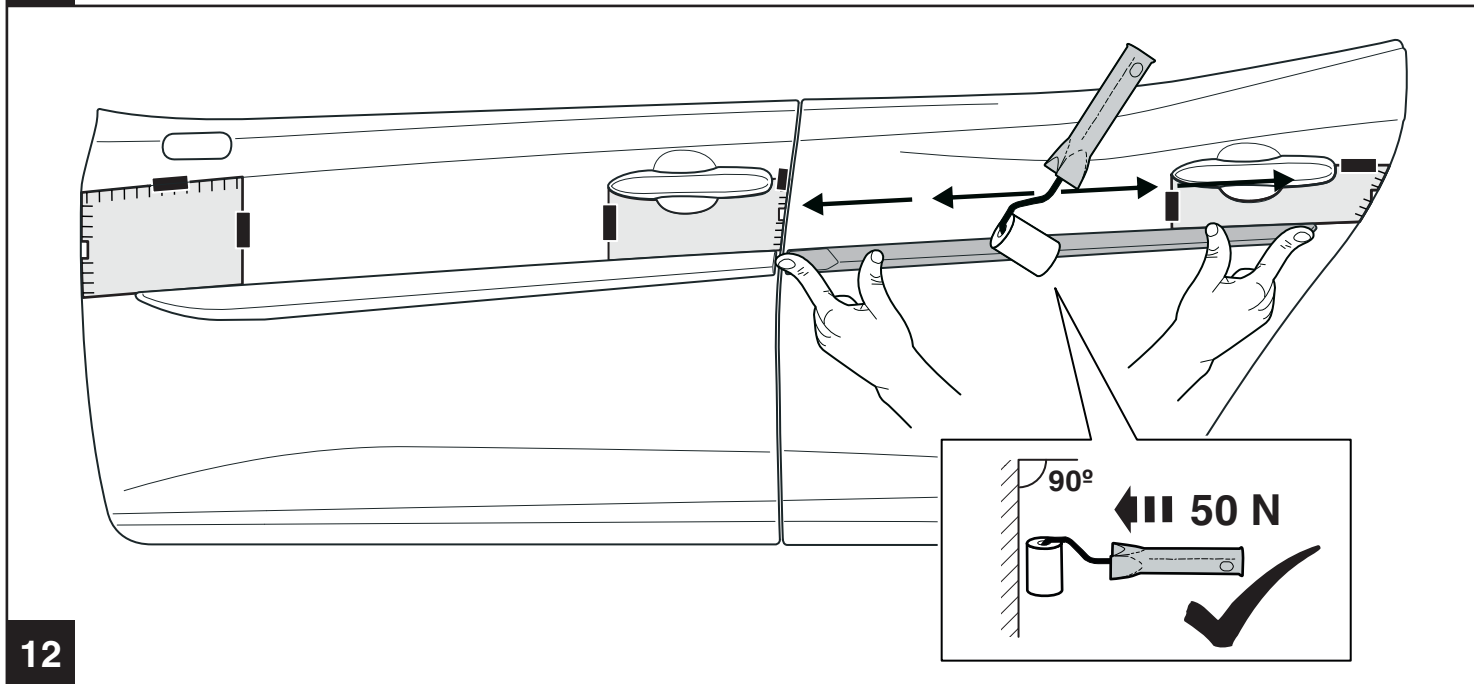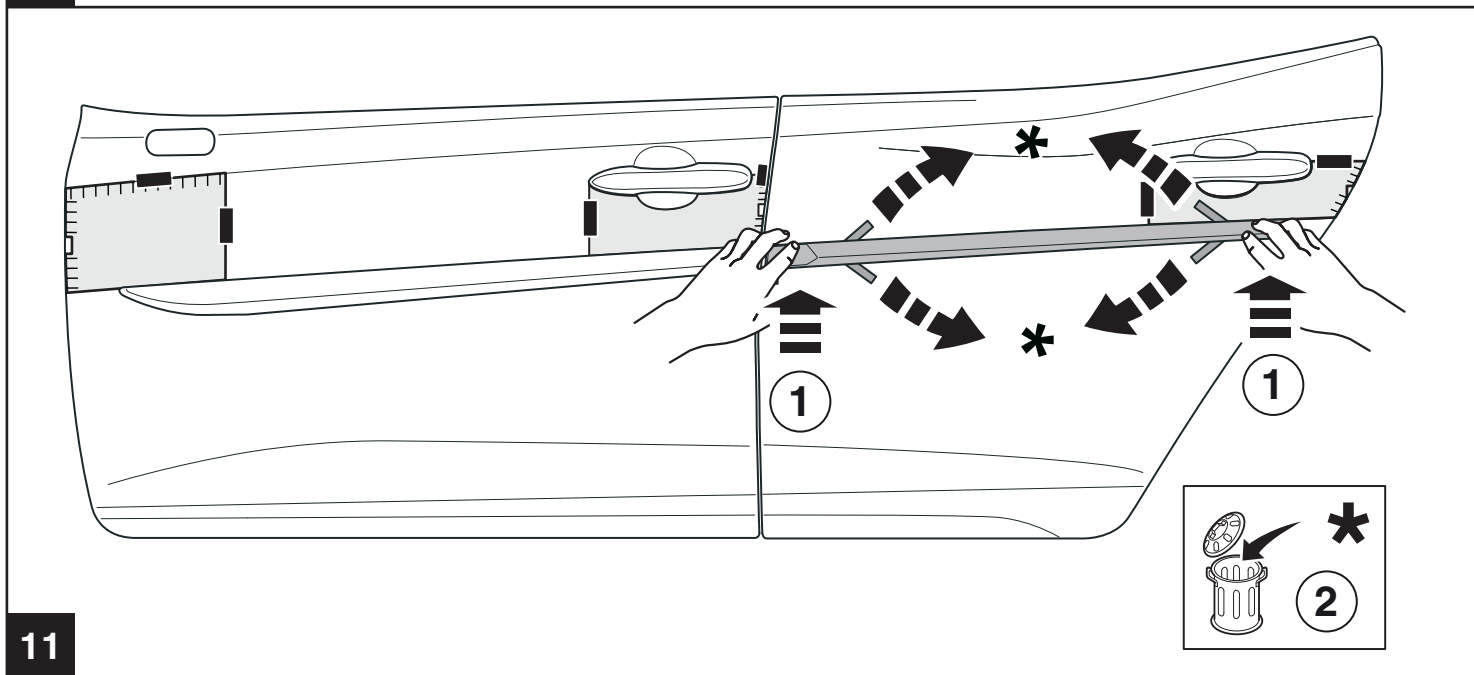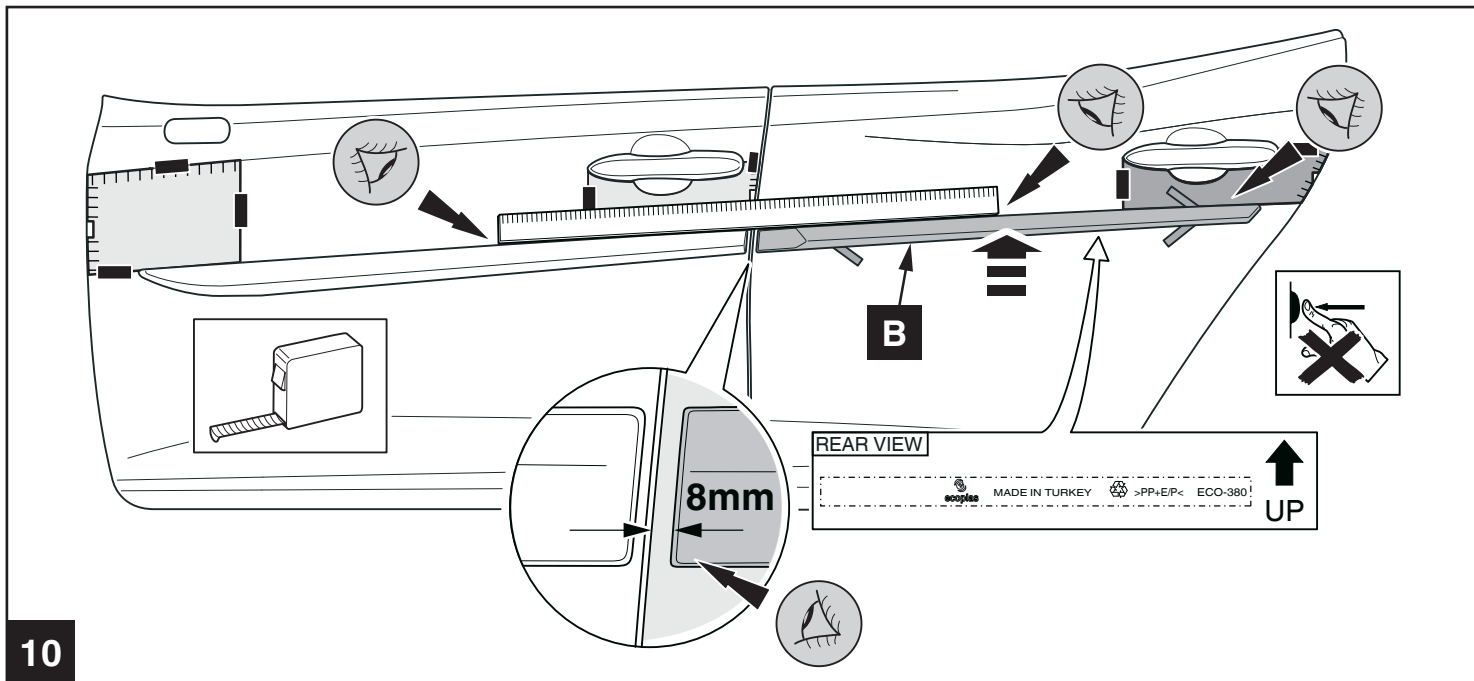


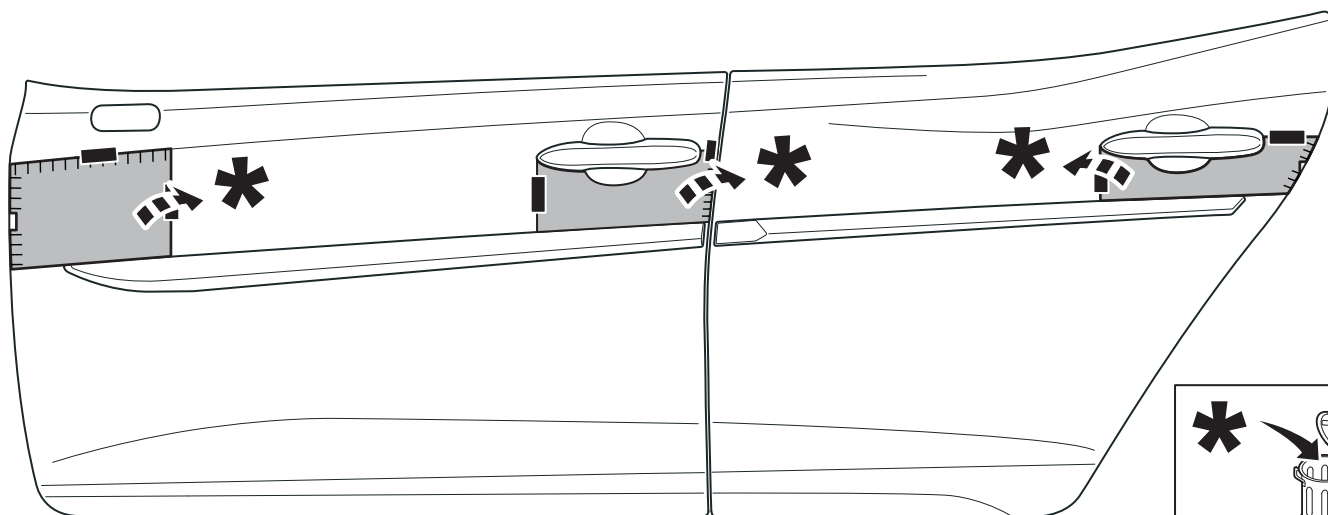

13

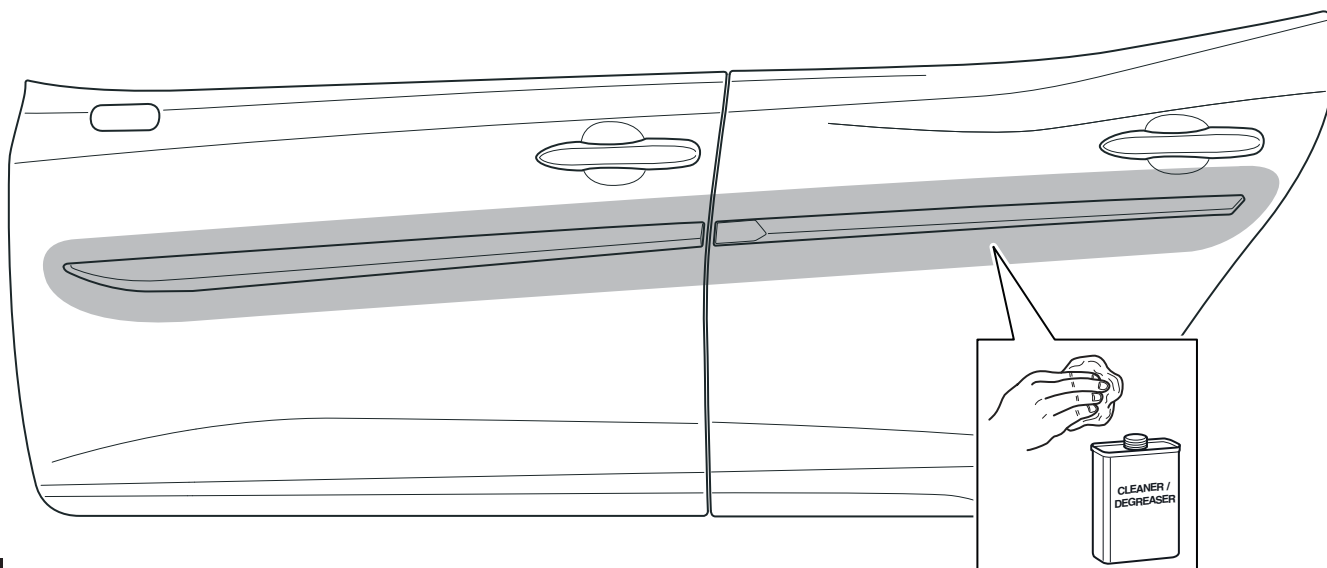

14

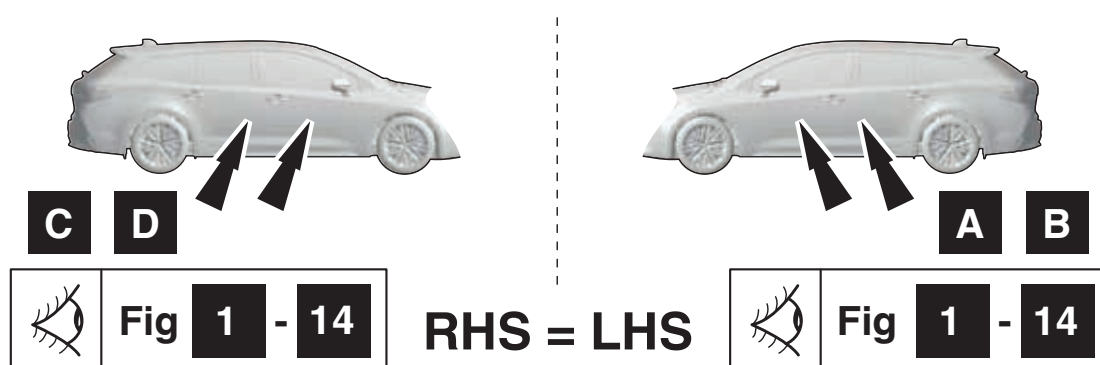

15

INFO

