


### **INSTALLATION INSTRUCTIONS**

**SARI STEP** Description: Part Number: 43600-2982\* Applications: UZ125 Installation Time: 0.3 H


#### Contents

Ref.	Description	QTY
1	Sari Step	1
2	Bolt (M8x60)	2
<u>(3)</u>	QR Code Sheet	1

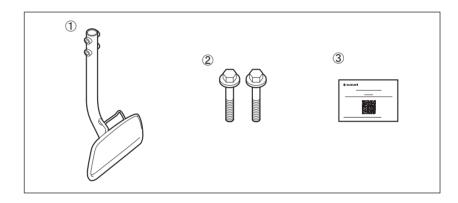

## Tools Required

Ref.	Description
(1)	① Driver
(2)	Socket (10, 12 mm)
(3)	Ratchet handle
(4)	Extension (200~300 mm)
(5)	Torque wrench
(6)	Universal joint
•	_

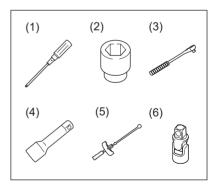



#### Important

#### **★ WARNING / ★ CAUTION / ⊕ NOTICE / ⊕** NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol  $\triangle$  and the words **WARNING**, **CAUTION**, **NOTICE** and NOTE have special meanings. Pay particular attention to messages highlighted by these signal words:

#### **A** WARNING

Indicates a potential hazard that could result in death or serious injury.

#### **A** CAUTION

Indicates a potential hazard that could result in minor or moderate injury.

#### **NOTICE**

Indicates a potential hazard that could result in vehicle or equipment damage. ⇒ **⊕** 

#### NOTE

# Precautions for Installation

- 1. Check that the kit includes all the parts listed on the first page.
- 2. Check each part in the kit for scratches or any form of damage.
- 3. Park the vehicle on a level ground.
- 4. Remove the ignition key from the switch and store it in a safe place.
- 5. Disconnect the negative (-) cable from the battery.
- Protect any items removed or to be installed from scratches by placing them on a soft cloth first before putting them on the ground.
- 7. Use care not to cause any damage to the body of the vehicle during installation of the accessory.




Be sure to refer to the UZ125 service manual, when removing or installing STD parts.

\* STD parts = Component parts of SUZUKI motorcycle




#### Installation Removal of the motorcycle parts

1. Remove the luggage box cover (A).

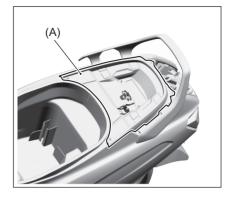

2. Remove the luggage box (B).

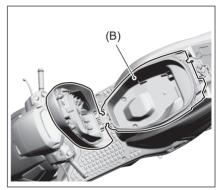




#### Installation of the Sari Step

1. Fix the Sari Step ① to the bracket on the frame by using the Bolts (M8x60) ②.

Bolt (M8x60) ② :26 N·m (2.7 kgf-m, 19.2 lbf-ft)



Insert the Bolts (M8x60) ② from the front of the motorcycle and tighten them.

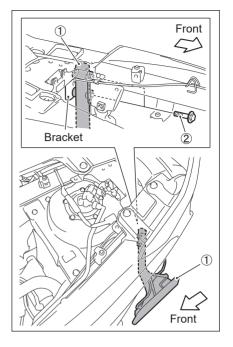

2. Install the removed motorcycle parts in the reverse order of removal.