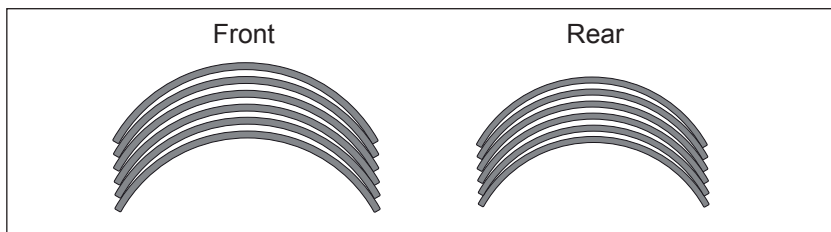


Description : **WHEEL RIM DECAL**


Part Number : 68200-2081*-***

Applications : DS250

Installation Time : 0.7 Hours

Contents

**Items
Provided
by the
Customer**
Ref. Description

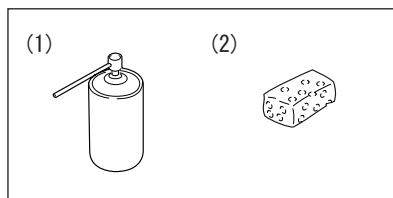- | | |
|-----|--|
| (1) | Degreasing agent
(Available at store) |
| (2) | Sponge |



Important
▲ WARNING / ▲ CAUTION / NOTICE / NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol ▲ and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

▲ WARNING

Indicates a potential hazard that could result in death or serious injury.

▲ CAUTION

Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle or equipment damage. ⇨ ⓘ

NOTE

Indicates special information to make maintenance easier or instructions clearer. ⇨ ⓘ

**Precautions
for
Installation**

1. Check that the kit includes all the parts listed on the first page.
2. Check each part in the kit for scratches or any form of damage.
3. Park the vehicle on a level ground.
4. Remove the ignition key from the switch and store it in a safe place.
5. Disconnect the negative (–) cable from the battery.
6. Protect any items removed or to be installed from scratches by placing them on a soft cloth first before putting them on the ground.
7. Use care not to cause any damage to the body of the vehicle during installation of the accessory.

Installation Attach the Decals as following illustration.




- *Clean and degrease the attaching area of the Decals.*
- *Do not use an organic solvent for degreasing of body parts.*
- *Perform the same operation below for left side and right side.*



- *A size of the Front Decal is larger than the Rear one.*
- *The Front and Rear Decal are different as follows.*

Right Side

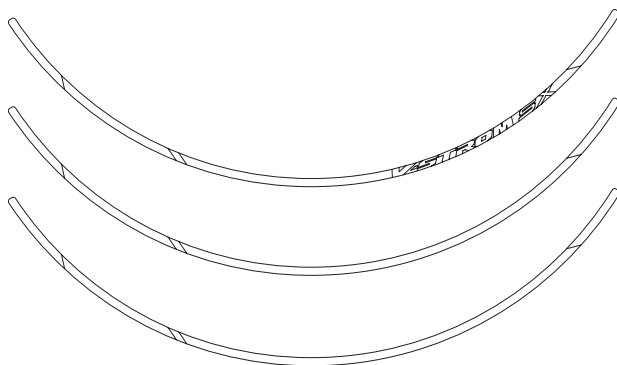

Left Side

